

ELIO MEDIUM TABLE LAMP

ET1511

General Product Information:



UL
LISTED



SAVE THESE INSTRUCTIONS!



INDOOR



DRY LOCATION



PLEASE SEE
visualcomfort.com
FOR PRODUCT SPECS




BULB(S)
(NOT INCLUDED)



CONVERTS TO LED



POLARIZED PLUG

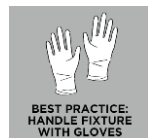

BEST PRACTICE:
HANDLE FIXTURE
WITH GLOVES



CLEAN WITH SOFT,
DRY CLOTH ONLY. NO
HARSH CHEMICALS!



Safety Information

IMPORTANT SAFETY INSTRUCTIONS


This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.



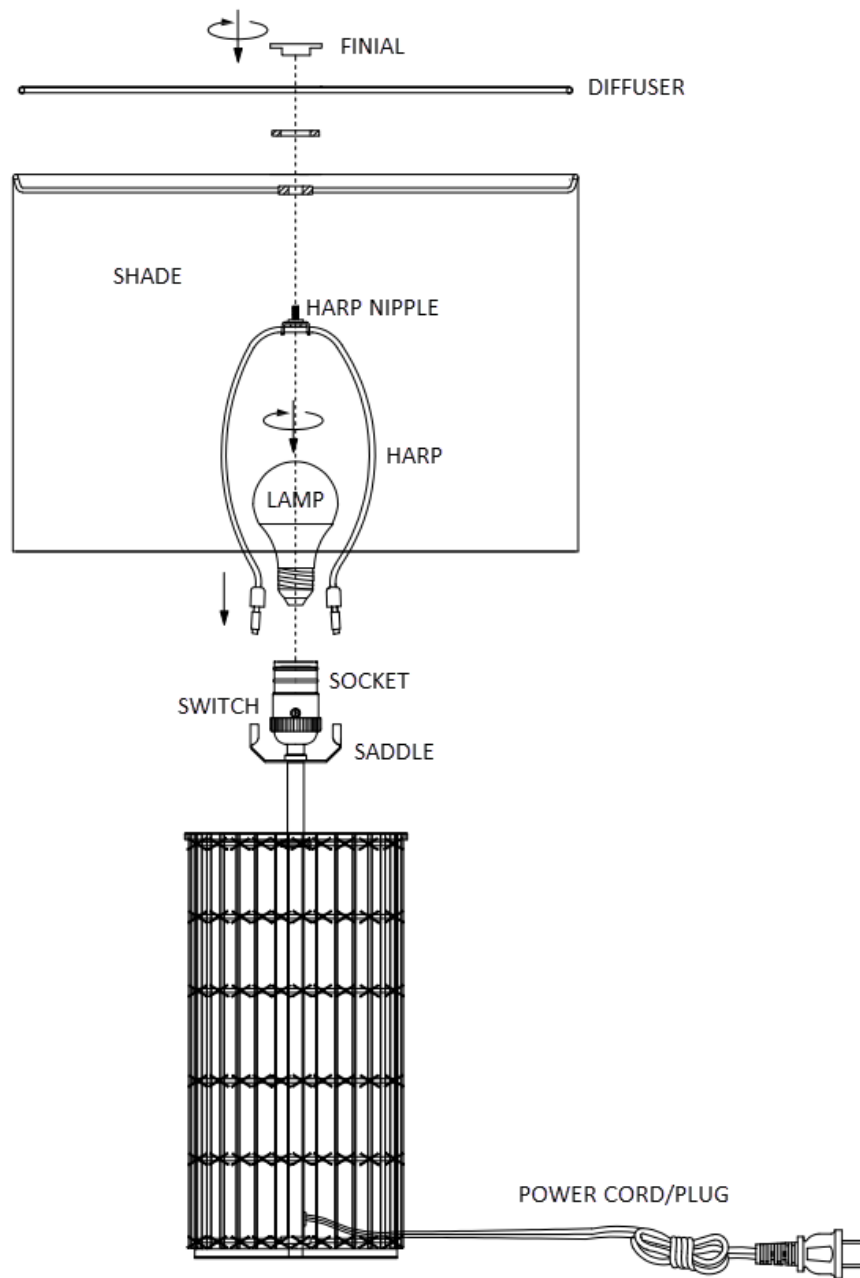

INSTRUCTIONS

1. Carefully unbox and examine all the items included in the packaging of the lamp.
2. Remove the finial knob from the harp.
3. Secure the harp to the socket assembly.
4. Place the lamp shade and diffuser onto the harp nipple and secure it with the finial knob.
5. Screw the lamp or light bulb into the bulb socket.
6. Remove the protective plug cover from the plug portion of the power cord.
7. Plug the power cord into a functioning electrical outlet.
8. Use the switch to turn the lamp on and off to test that it functions properly.