





ASSEMBLY INSTRUCTION MODEL #DUM-9803-GE

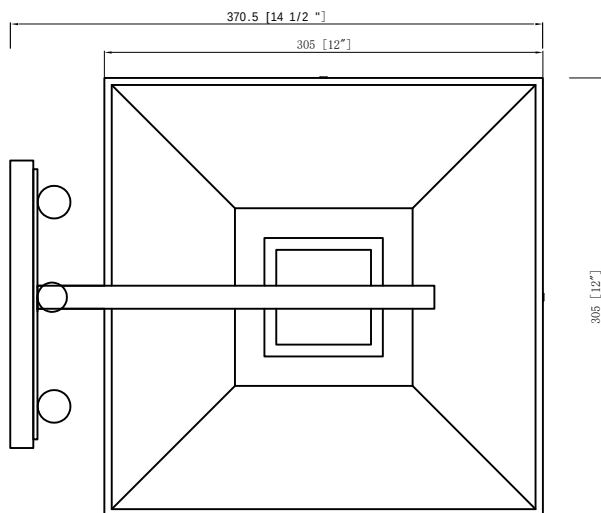

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 3 - Med. Bulb
40 Watts Recommended 60 Watts Max

USE LED BULBS FOR EXTENDED USE


THIS FIXTURE IS WET RATED

How to Install

1. Remove the top cage by loosening the cap nuts and install the bulb into the socket.
2. Insert the glass into the bottom cage and secure with the clip.
3. Place the top cage over the bottom cage while inserting the bottom end of the top arm onto the stud. Secure the top cage with the cap screw.
4. Place the mounting plate over the outlet box and mark 4 points on the wall surface at the center of the 4 holes on the mounting plate.
5. Drill 4 holes at the marked points and insert the wall anchors.
6. Attach the mounting plate over the outlet box using two outlet box screws. Insert the anchor screws into the wall anchors to tighten it.

How to change bulb

1. Remove the screw on the bottom of the bottom cage.
2. Lift the top cage up and change the bulb.
3. Put the top cage back and secure with the screws.

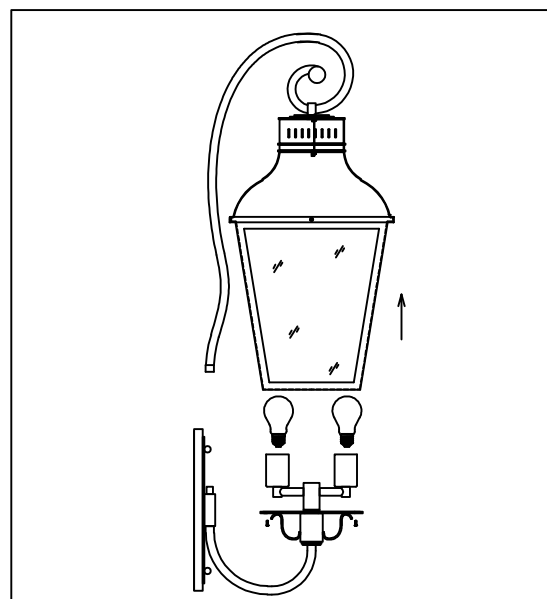

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

J. (4)Cap nuts

