


ASSEMBLY & INSTALLATION INSTRUCTIONS

Davis Outdoor Lantern 365213

A1025

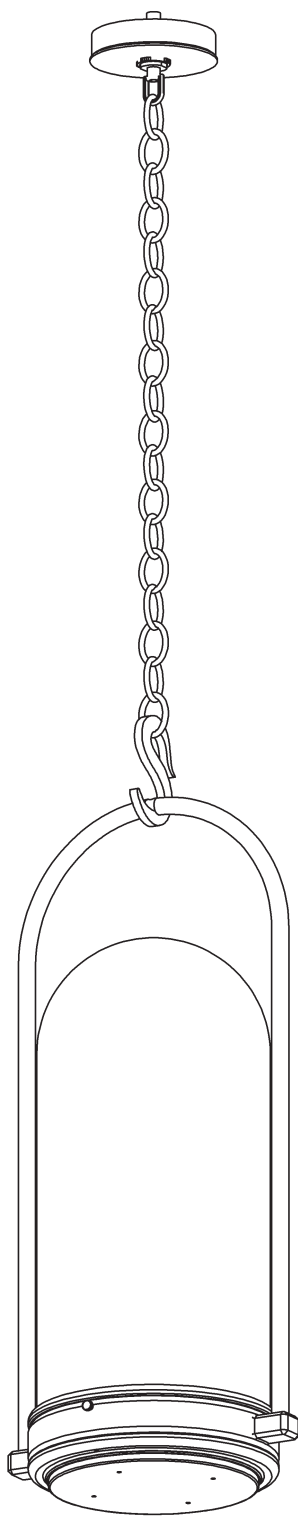

HUBBARDTON FORGE.

Component Parts

- A Crossbar
- B Lock Nut
- C Nipple
- D Ground Screw
- E Canopy
- F Canopy Ring
- G Canopy Loop
- H Chain
- I Fixture Loop
- J Fixture
- K Socket (4)
- L Bulb (4) - not included
- M Glass
- N Thumb Screws (2)

ASSEMBLY & INSTALLATION INSTRUCTIONS

A1025

Davis Outdoor Lantern 365213

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Caution: Damp location outdoor hanging fixtures are designed for use in covered spaces such as porches protected from prolonged exposure to water and wind. If installing in locations subject to wind the use of supplementary chains, cables, or similar restraints may be necessary to protect against swinging and twisting. If in doubt consult a qualified installer.

Please Note: After installation, extra hardware and accessories are possible; our kits are used on multiple products.


To Install Fixture (Figure 1)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack fixture from the carton.
2. Using two machine screws (not provided), fasten the crossbar (A) to the electric box with the head of the ground screw (D) facing down.
Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.
3. Thread nipple (C) into crossbar (A) and then thread lock nut (B) and canopy loop (G) onto threaded nipple, leaving parts loose. Adjust the length of threaded nipple in crossbar (A) so that canopy ring (F), which comes threaded onto canopy loop (G), will hold canopy (E) against the ceiling with no threads showing for best appearance. When the correct adjustment is established, tighten lock nut against crossbar to hold adjustment.
4. Remove the crossbar (A) assembly from electrical box.
5. Attach one end of the chain (H) to the fixture loop (I). Lace the wires through every other link of the chain (H) to the end. Slip wires and chain (H) through canopy ring (F) and canopy (E). Fasten the chain to the canopy loop (G) using chain spreader.
6. Slip wires through the canopy loop (G) and nipple (C). Make sure to provide enough slack in the wire to ensure weight of fixture is supported by the chain.
7. Using two machine screws (not provided), reattach the crossbar (A) to the electric box.
8. Using suitable wire connectors (not provided) connect fixture wires to supply wires (white to ribbed side of the fixture cord, black to smooth side). Attach a pigtail lead from ground screw (D) to the electric box. Holding canopy (E) close to ceiling, connect all ground wires (bare copper or green to bare copper or green) together.

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY AND NO BARE WIRE IS EXPOSED.

9. Raise canopy (E) to the ceiling and secure loop collar (F) to canopy loop (G).
10. Follow steps on next page to install glass.

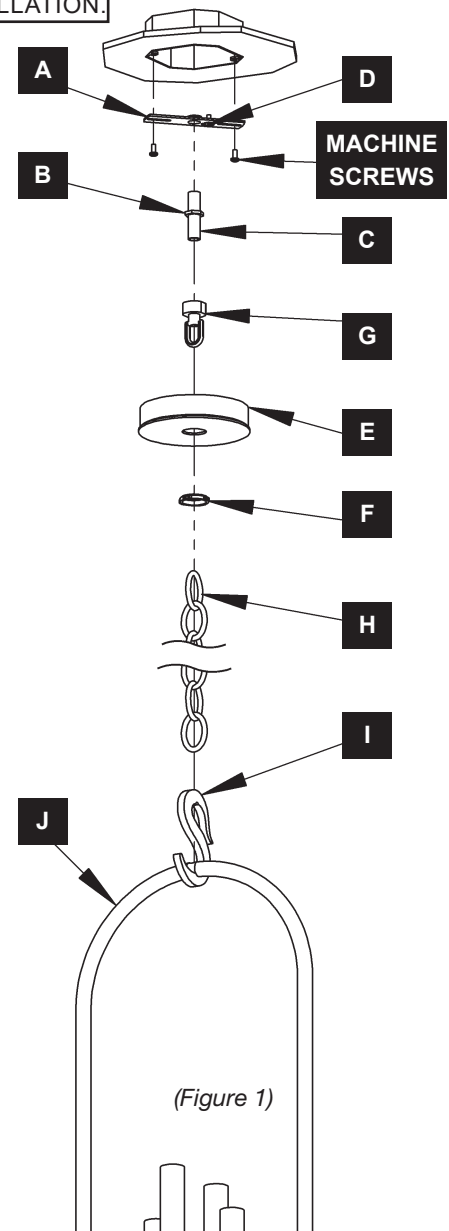

(Figure 1)



HUBBARDTON FORGE.

To Install Glass (Figure 2)


1. Install bulbs (L), not included, into sockets (K).
2. Carefully unpack glass (M).
3. Remove thumb screws (N) and using the synthetic grease supplied apply to the threads of all screws.
Note: Application of grease to the threads will need to be done each time the screws are un-threaded during bulb maintenance.
4. Re-install thumb screws (N). Only thread each one in a thread or two.
5. Tilt glass (M), over bulbs (L) and into groove in fixture (J).

Note: It may be necessary to unthread thumb screws to allow glass to slide into ring. Thumb screws will not need to be completely removed.

6. Tighten thumb screws (N) evenly to secure glass (M) in fixture (J).

Note: Be sure not to overtighten as this could break glass.

7. Restore electricity at main breaker.

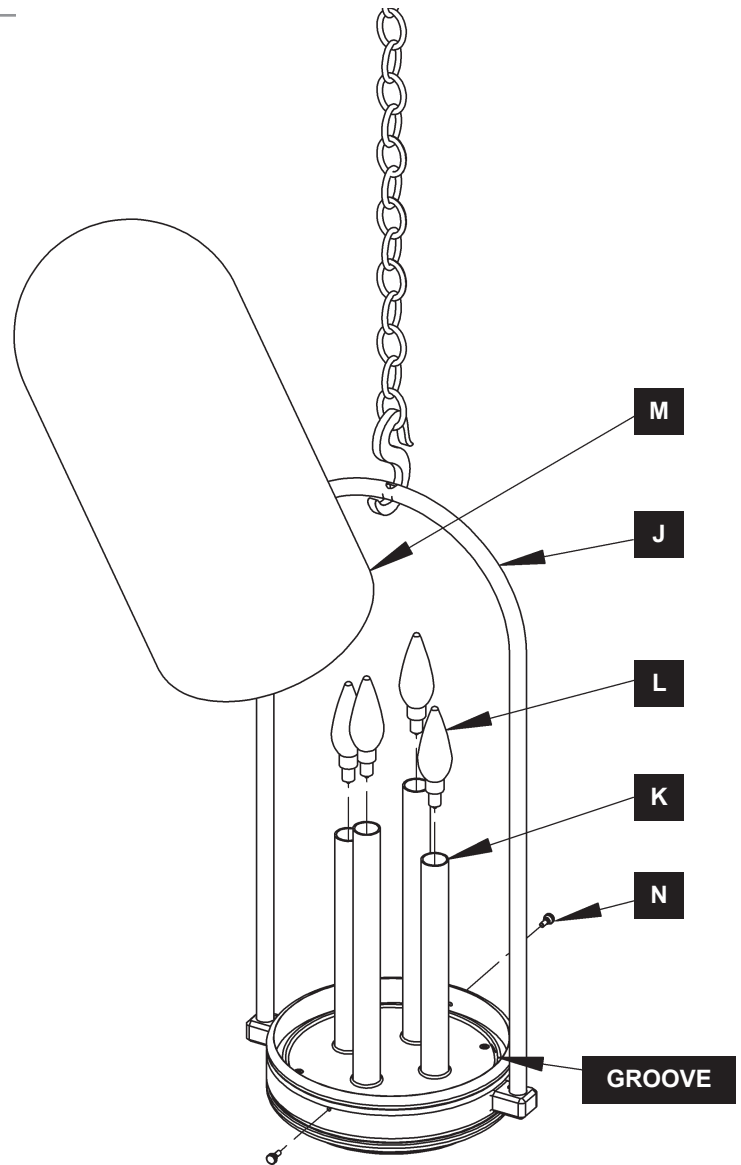

(Figure 2)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*** Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**



HUBBARDTON FORGE.