



CRYSTORAMA LIGHTING

A M I T C T I M


#CAP-8509-MK-TG



Crystorama.com

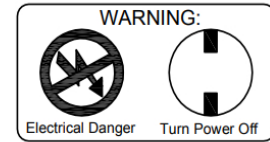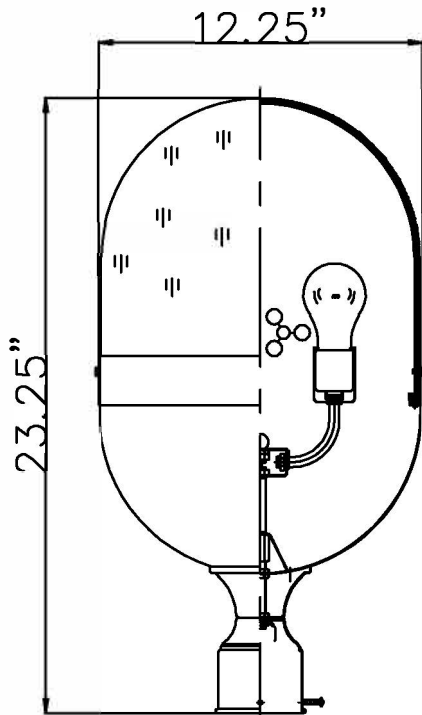

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

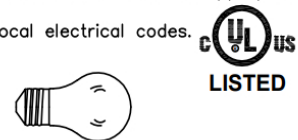

You will need 3 – Med.Bulb


60 Watts Recommended

USE LED BULBS FOR EXTENDED USE

California T24 JAB–2016 Qualified: Satco

(S9612); 10.5 watt LED Medium Base

recommended. Bulb not included

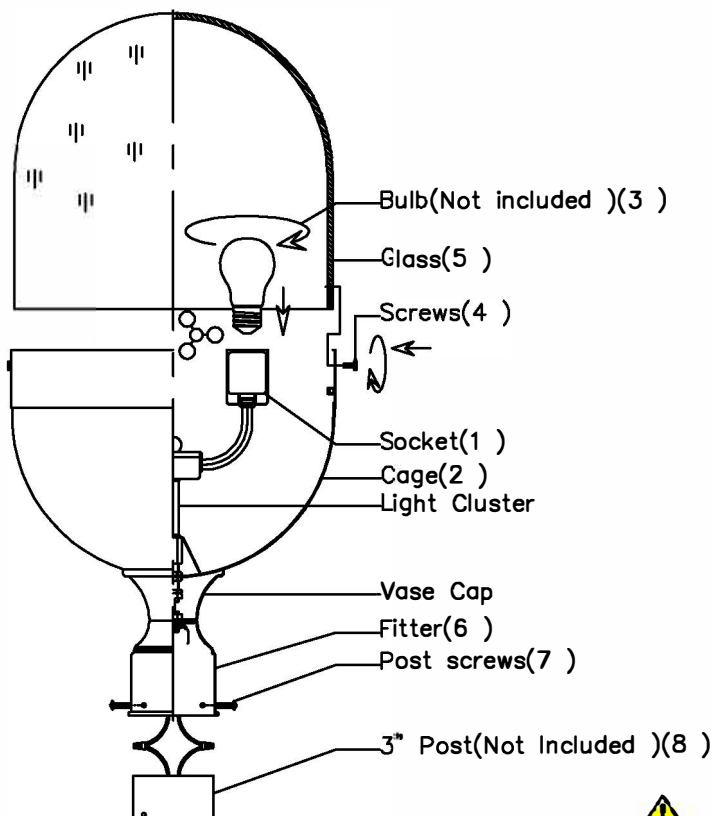

How to Install

- 1.To install glass , separate the Cage (2) , by removing the Screws (4).
2. Install the bulb (3) to the socket (1).
3. Connect the Glass (5) and the Cage (2), by screwing in Screws (4) to secure cage.
4. The Fitter(6) can now be mounted to the Post(8) by the Post screws(7).

Replacement Glass Installation:

- 1 .Follow instructions # 1 and # 3 above to install new glass. Complete by connecting the Cage (2) and the Glass (5) by screwing in Screws (4) to secure cage.

Bulb replacement:

1. Separate the Glass (5) and the Cage (2), by removing Screws (4).
2. Install the bulb (3) into the socket
3. Complete by connecting the Glass (5) and the Cage (2) by screwing in Screws (4) to secure cage.



WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA LIGHTING

A M I T C T I M

#CAP-8509-MK-TG



Crystorama.com

Part Number

- A. (3)–Bulb(Not Included)
- B. (1)–Glass; $\phi 11.75" \times 11"$; XN08509TOPGLA11.75IN
- C. (3)–Screws
- D. (3)–Socket
- E. (1)–Cage; XN08509MKCAGE
- F. (1)–Light Cluster
- G. (1)–Vase Cap
- H. (1)–Fitter
- I. (3)–Post Screws
- J. (1)–3" Post(Not Included)

